


# SCS 07\_01 SOFFIT SLOPE

It is imperative that the Soffit slope upwards towards the wall to prevent water from traveling to the cement plaster cladding

Do NOT apply stucco up the wall and then fasten the "J" channel through the finished plaster cladding. It will fracture the plaster and provide points of water entry at fasteners.

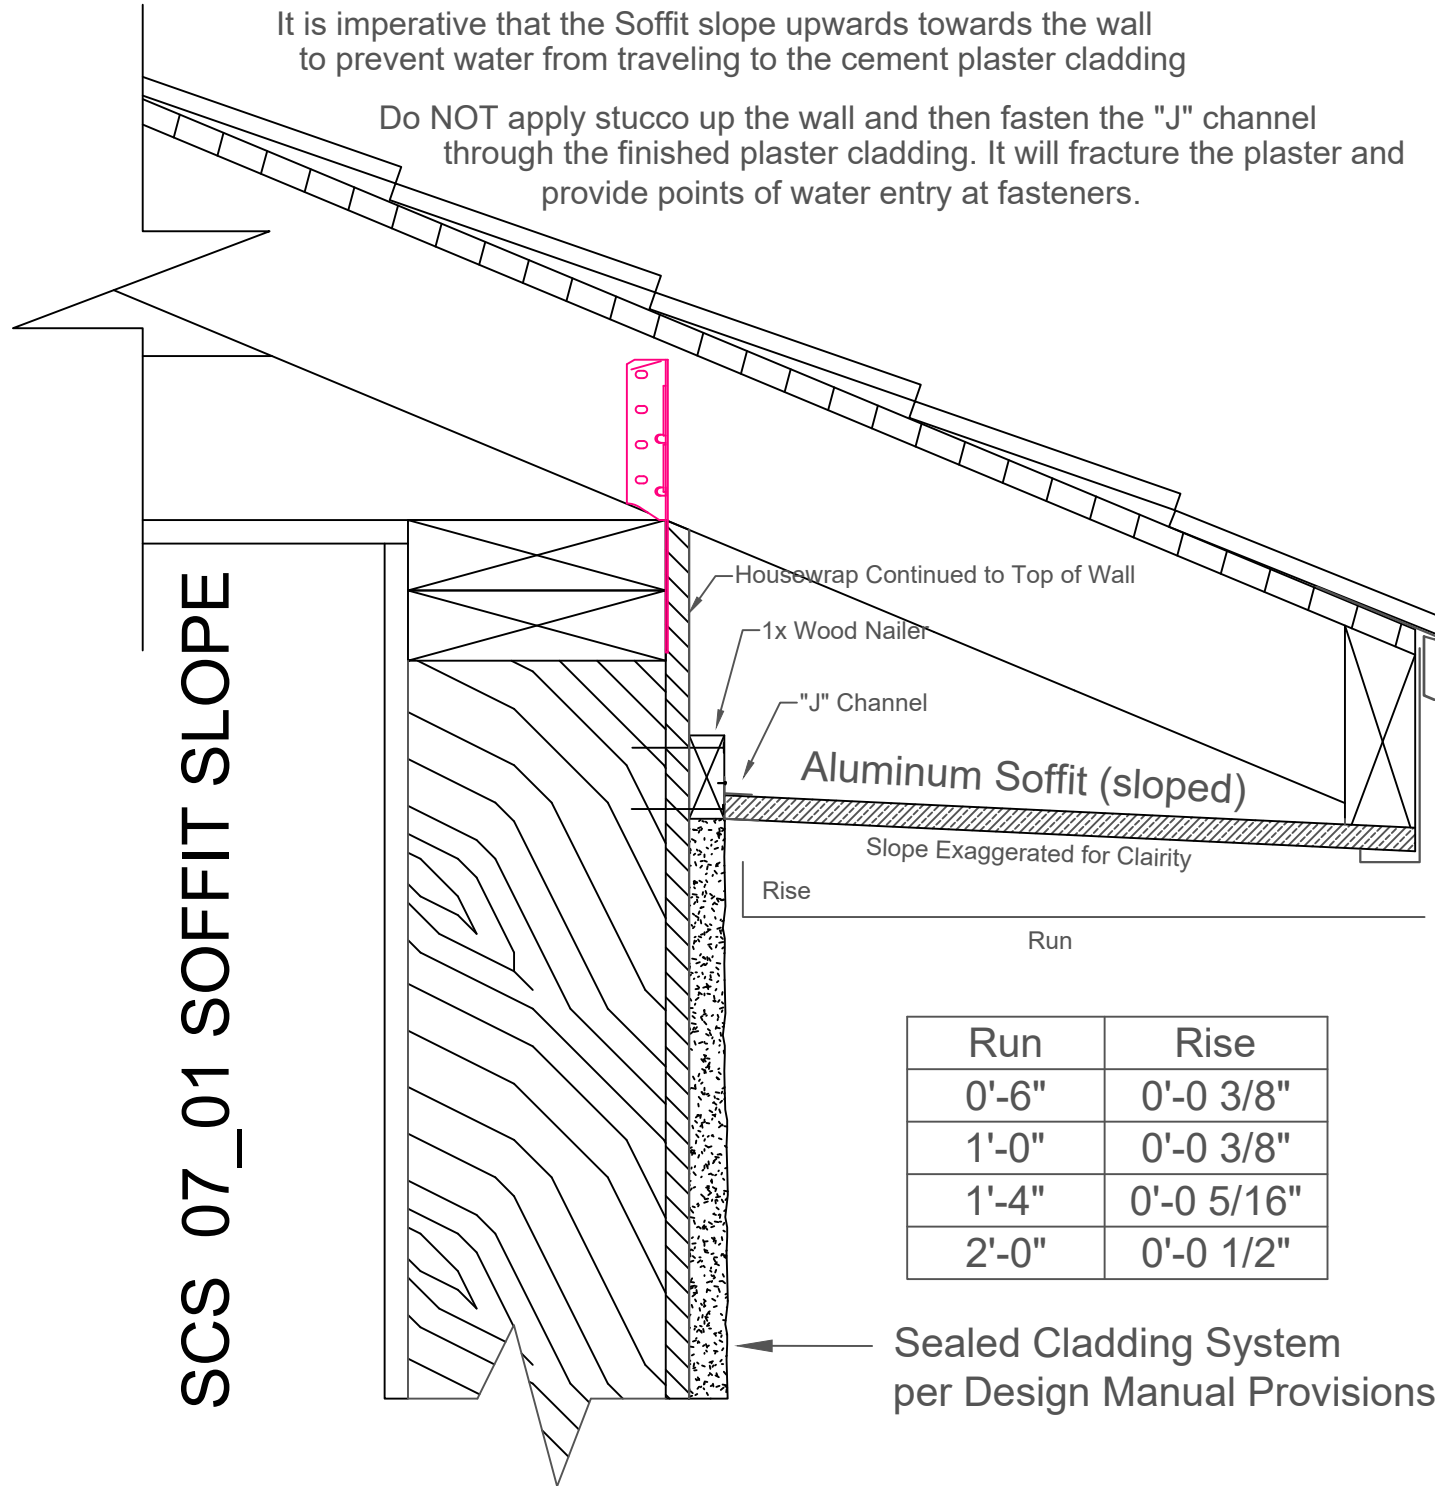

Run	Rise
0'-6"	0'-0 3/8"
1'-0"	0'-0 3/8"
1'-4"	0'-0 5/16"
2'-0"	0'-0 1/2"

Sealed Cladding System per Design Manual Provisions

Note:  
Details to be used in conjunction with all applicable provisions contained in the Sealed Cladding System Design Manual.

Sealed Cladding System

07/01/2020

SCS 07\_01